
MAXON[®] LIFT CORPORATION Sht. 1 of 6 DSG# M-04-24 Rev. A Date: 01/02/14

INSTRUCTION, GPTLR CYCLE COUNTER INSTALLATION P/N 267300-01

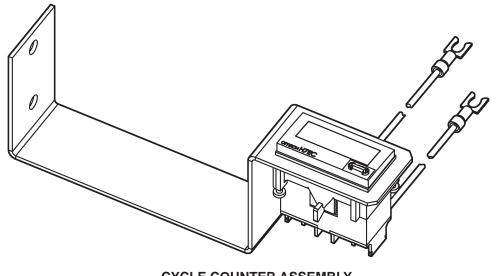

CYCLE COUNTER ASSEMBLY P/N 267299-01 QTY. 1



FLAT WASHER, 1/4" P/N 902013-09 QTY. 2 CAP SCREW, 1/4"-20 X 3/4" LG, GRD 8 P/N 900004-2 QTY. 2





LOCK NUT, 1/4"-20 P/N 901000 QTY. 2

© MAXON Lift Corp. 2014


MAXON[®] LIFT CORPORATION Sht. 2 of 6 DSG# M-04-24 Rev. A Date: 01/02/14

To prevent personal injury and equipment damage, make sure power is disconnected from Liftgate while installing electrical parts.

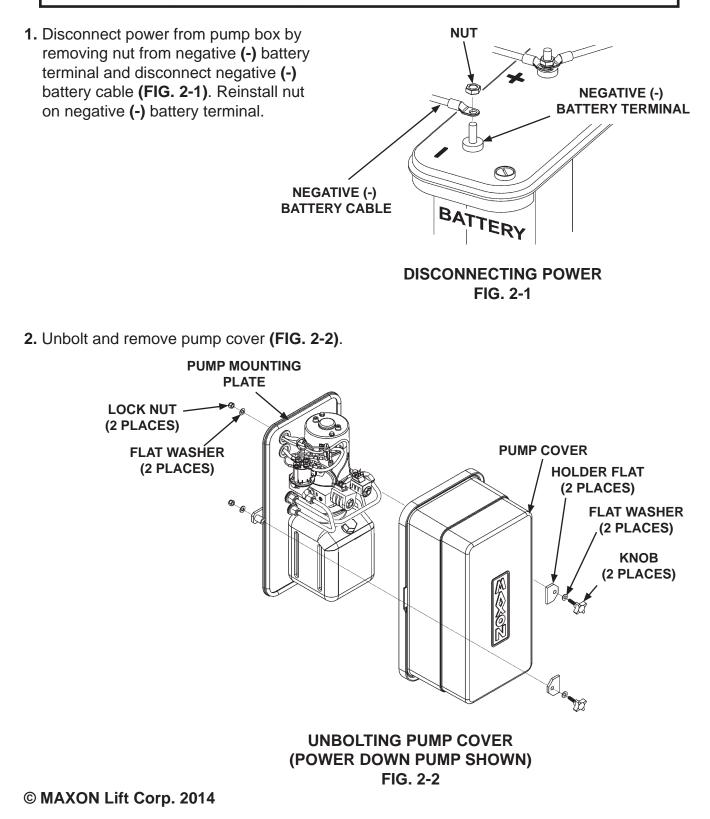

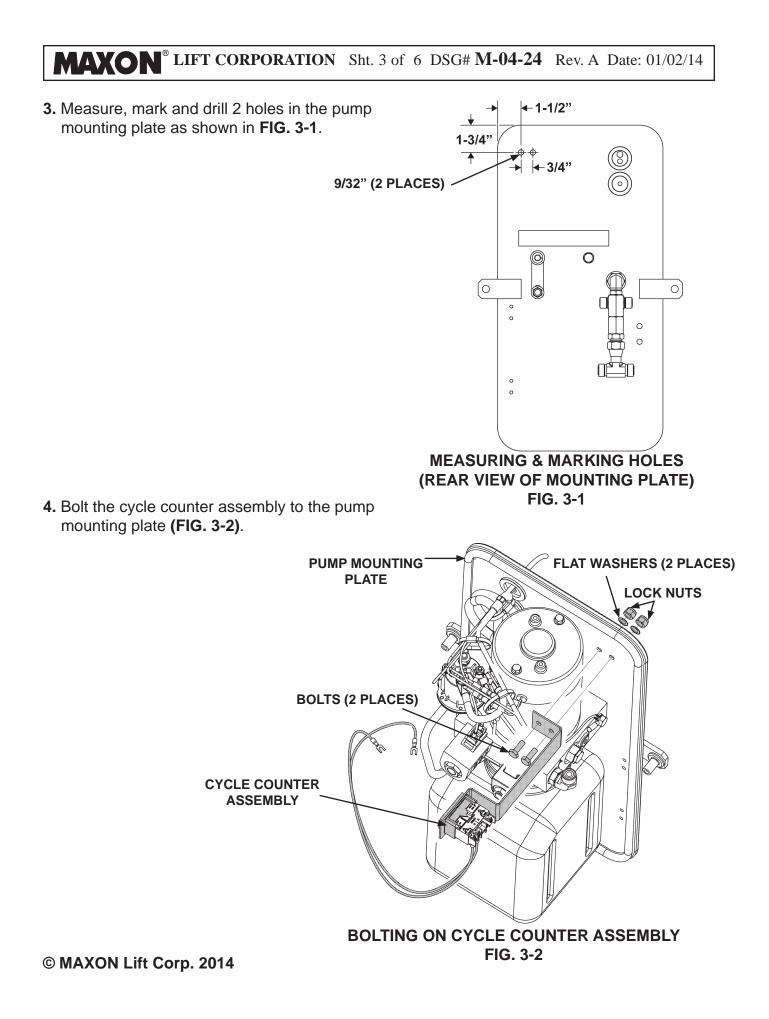

MAXON[®] LIFT CORPORATION Sht. 4 of 6 DSG# M-04-24 Rev. A Date: 01/02/14

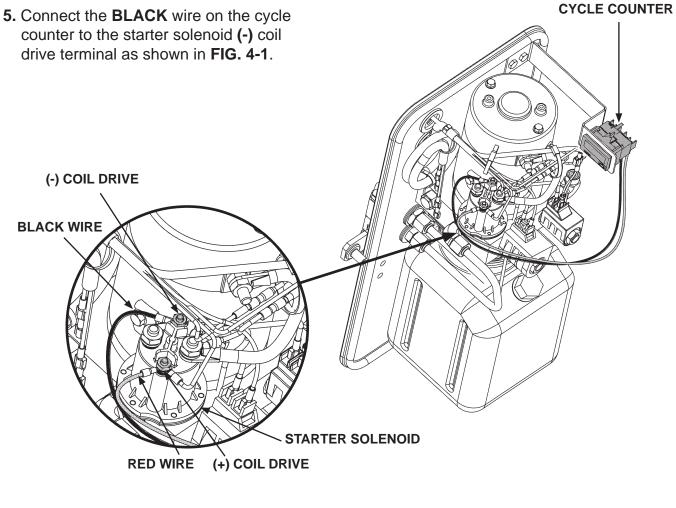


WIRING CYCLE COUNTER TO SOLENOID TERMINAL FIG. 4-1


 Connect the RED wire on the cycle counter to the starter solenoid (+) coil drive terminal (FIG. 4-1).

MAXON[®] LIFT CORPORATION Sht. 5 of 6 DSG# M-04-24 Rev. A Date: 01/02/14

Reconnect power as follows. Remove nut from negative (-) battery terminal. Reconnect the negative (-) battery cable to negative (-) battery terminal (FIG. 5-1). Reinstall and tighten nut.

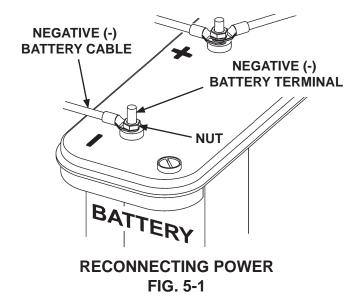

 Raise and lower liftgate platform 1 or more times (see Operation Manual). Check number on cycle counter indicator (FIG. 5-2). The number of raise and lower cycles you observed must equal number indicated on cycle counter.

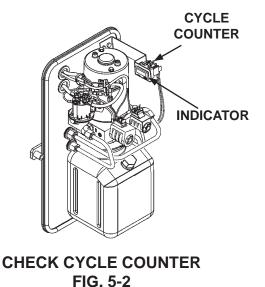

© MAXON Lift Corp. 2014

MAXON[®] LIFT CORPORATION Sht. 6 of 6 DSG# M-04-24 Rev. A Date: 01/02/14

9. Bolt on the pump cover (FIG. 6-1).

