
MAXON[®] LIFT CORPORATION Sht. 1 of 2 DSG# M-14-35 Rev. A Date: 07/21/16

INSTRUCTIONS, LICENSE PLATE LIGHT INSTALLATION (C1 & C2 STAKEBED LIFTGATES)

NOTE: The license plate lights are contained in small parts

and manual kits shipped with C1 & C2 Liftgates.





LICENSE PLATE LIGHT (C1 LIFTGATES) P/N 289549-01 QTY. 2 LICENSE PLATE LIGHT (C2 LIFTGATES) P/N 907210-01 QTY. 1


Remove all rings, watches and jewelry before doing any electrical work.

To prevent accidental personal injury and equipment damage, disconnect (-) battery cable from battery.

Never route an energized wire. Make sure battery is disconnected. Always route electrical wires clear of moving parts, brake lines, sharp edges and exhaust systems. Avoid making sharp bends in wiring. Attach securely. If drilling is necessary, first check behind the drilling surface so you do not damage any fuel lines, vent lines, brake lines or wires.

1. Disconnect power from truck battery by disconnecting negative (-) battery cable from battery (-) terminal (FIG. 1-1). NEGATIVE (-) BATTERY CABLE NEGATIVE (-) BATTERY TERMINAL BATTERY DISCONNECTING POWER

FIG. 1-1

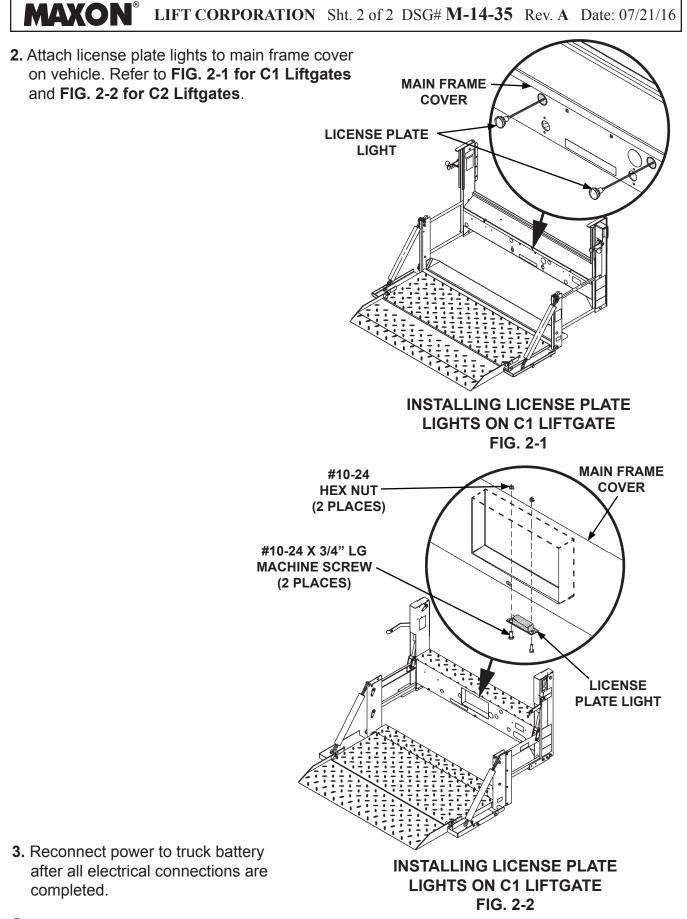

© MAXON Lift Corp. 2016